# (R) **INSERT INSTALLATION TECHNOLOGY**

# **Model HM Manual Heat Insert Driver**

As much as 75% of an Insert's performance is the direct result of how well it was installed. Therefore, in order to maximize performance, all of the factors that impact installation must be carefully controlled. SPIROL's Model HM Manual **Insert Driver** has been designed to eliminate the dependency on the operator to control these factors. The result is nearly perfect flow of the plastic for optimal retention and performance.

# Designed to install virtually any type of **Heat/Ultrasonic Style Insert**

#### Standard Features:

- Internal air-spring installation system for infinitely adjustable and consistent force
- Easily adjustable, digital temperature controller
- Easily interchangeable heat tips to accommodate various Insert sizes and applications

#### The Model HM is:

Easy: - Simple to operate and easily adjustable

Accurate: - Base plate is pre-drilled for simple and precise

fixture location

Reliable: - Post mount style frame is sturdy, lightweight, and


Precise: - Micrometer style insertion depth stop for accurate,

consistent installations

**Versatile:** - Installs Inserts ranging in sizes from M2 to M6 metric

threads and No. 2 to 1/4" unified threads, and the simple up-down adjustment of the machine makes it easy to accommodate various sized components

Model HM Shown with

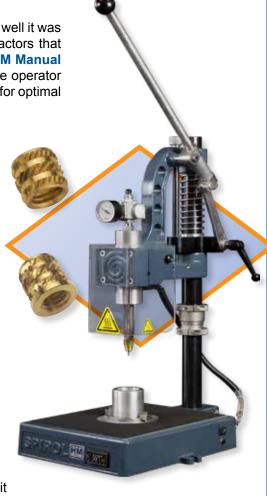

optional fixture

Optional alignment fixtures available.

Automated installation machines are also available from SPIROL.





#### **Application:**

A molder of plastic yo-yos wanted to introduce a higher quality product to the market. By incorporating threaded Brass Inserts into each half of the yo-yo, a higher quality joint would be created resulting in a truer rotational axis. Inserts also provide reusable threads which would enable unlimited assembly and disassembly without damage to the plastic. The molder wanted to utilize existing molds, as well as minimize the investment required to install the Inserts. The high heat and limited space made manual loading of the Insert into the mold undesirable. There was also the potential for a mis-loaded Insert to cause costly damage to the mold.

#### Solution:

SPIROL's Engineers reviewed the application, and recommended that a symmetrical brass Insert be used in conjunction with several economical SPIROL Model HM Manual Heat Inserters. The HM heat machines were lined up in a portable production work cell. The symmetrical design made placement of the Insert in the yo-yo's hole quick and easy. The HM machine has only two settings, temperature and air pressure, making it extremely easy to use. The operator places the Insert in the hole, pulls the handle on the press until it reaches a positive stop, and holds. The heated tip engages the Insert and transfers heat until the Insert reaches the correct melt temperature of the plastic. The compressed air, created by pulling the handle, then smoothly and consistently pushes the Insert into position. This system delivers exceptionally repeatable, quality installations that result in consistent Insert performance. The HM also provides versatility for future designs as it can easily be converted to install almost any size and style heat Insert.

**SPIROL** Application Engineers will review your application needs and work with your design team to recommend the best solution. One way to start the process is to select **Installation Systems** in our **Optimal Application Engineering** portal at www.**SPIROL**.com.

#### **Technical Centers**

#### Americas

### **SPIROL International Corporation**

30 Rock Avenue Danielson, Connecticut 06239 U.S.A. Tel. +1 860 774 8571

Fax. +1 860 774 2048

#### **SPIROL Shim Division**

321 Remington Road Stow, Ohio 44224 U.S.A. Tel. +1 330 920 3655 Fax. +1 330 920 3659

#### **SPIROL Canada**

3103 St. Etienne Boulevard Windsor, Ontario N8W 5B1 Canada Tel. +1 519 974 3334 Fax. +1 519 974 6550

#### **SPIROL Mexico**

Avenida Avante #250 Parque Industrial Avante Apodaca Apodaca, N.L. 66607 Mexico Tel: +52 (01) 81 8385 4390 Fax: +52 (01) 81 8385 4391

#### SPIROL Brazil

Rua Mafalda Barnabé Soliane, 134 Comercial Vitória Martini, Distrito Industrial CEP 13347-610, Indaiatuba, SP, Brazil Tel. +55 19 3936 2701 Fax. +55 19 3936 7121

#### Europe

#### SPIROL France

Cité de l'Automobile ZAC Croix Blandin 18 Rue Léna Bernstein 51100 Reims, France Tel. +33 3 26 36 31 42 Fax. +33 3 26 09 19 76

#### **SPIROL United Kingdom**

17 Princewood Road Corby, Northants NN17 4ET United Kingdom Tel. +44 1536 444800 Fax. +44 1536 203415

#### **SPIROL Germany**

Ottostr. 4 80333 Munich, Germany Tel. +49 89 4 111 905 71 Fax. +49 89 4 111 905 72

#### SPIROL Spain

08940 Cornellà de Llobregat Barcelona, Spain Tel. +34 93 669 31 78 Fax. +34 93 193 25 43

#### SPIROL Czech Republic

Sokola Tůmy 743/16 Ostrava-Mariánské Hory 70900 Czech Republic Tel/Fax. +420 417 537 979

#### **SPIROL Poland**

ul. Solec 38 lok. 10 00-394, Warszawa, Poland Tel. +48 510 039 345

# Asia Pacific

#### ia SPIROL Asia Headquarters

1st Floor, Building 22, Plot D9, District D No. 122 HeDan Road Wai Gao Qiao Free Trade Zone Shanghai, China 200131 Tel. +86 21 5046 1451 Fax. +86 21 5046 1540

## SPIROL Korea

160-5 Seokchon-Dong Songpa-gu, Seoul, 138-844, Korea Tel. +86 (0) 21 5046-1451 Fax. +86 (0) 21 5046-1540

e-mail: info@spirol.com